

ADJUSTABLE RANGE

mira
SHOWERS



RESPONSE
SHOWER FITTINGS

SHOWER FITTINGS

Installation

Operation &

Maintenance Guide

These instructions are to be left with the user

CONTENTS

Introduction	3
Important Safety Information	4
Pack Contents	5
Mira Response ev, flex and biv shower fittings	5
Mira Response bir shower fittings	6
Dimensions	7
Mira Response ev and biv	7
Mira Response bir	7
Specifications	8
Pressures.	8
Flow Rates.	8
Flow Performance Graphs	9
Installation requirements.....	10
Plumbing	10
Spray plate assembly - selection.....	11
Installation	12
Mira Response ev and Flex - Solid, dry-lined, stud partition, shower cubicle or laminated panel wall installation	12
Mira Response biv - Solid and dry-lined wall installation	16
Operation	25
Spray action	25
Height and direction adjustment.....	26
Maintenance.....	27
Cleaning	27
Spray plate assembly - removal and installation	28
Fault Diagnosis.....	29
Spare Parts	31
Notes	35
Customer Services.....	36

INTRODUCTION

Thank you for purchasing a quality Mira product. To enjoy the full potential of your new product, please take time to read this guide thoroughly, having done so, keep it handy for future reference.

The Mira Response Adjustable range of flexible and rigid shower fittings are precision engineered to give a satisfactory shower over a range of pressures. The fittings are suitable for pressures up to 5.0 bar (ev and biv) or 3.0 bar (bir), and pressures down to 0.06 bar. The adjustable Showerhead is supplied with a low capacity spray plate fitted. A high capacity spray plate assembly is also supplied with the Excel shower control and is available upon request for other shower controls.

Shower fittings covered by this guide:

Mira Response Exposed Variable Shower Fittings (ev)

An adjustable spray Showerhead with three different spray actions (start, force, soothe) and an economy setting*, supplied complete with flexible hose, adjustable clamp bracket assembly, slide bar and supports, soap dish and hose retaining ring. Suitable for connection to surface mounted shower controls only. Available in white, white/chrome, white/light golden or all chrome finish.

Mira Response Flex Shower Fittings

Offering the same features as the Response ev, in addition a separate wall mounted Showerhead holder is supplied. Suitable for connection to surface mounted shower controls only. Available in white/chrome finish.

Mira Response Built-in Variable Shower Fittings (biv)

Offering the same features as the Response ev, but suitable for connection to concealed pipework supplies only. Available in white, white/chrome, white/light golden or all chrome finish.

Mira Response Built-in Rigid Shower Fittings (bir)

An adjustable spray head with three different spray actions (start, force, soothe) and an economy setting*, suitable for connection to concealed pipework supplies only. Available in white or all chrome finish.

- * The economy setting reduces the water flow to give economical use of water, whilst still giving an adequate shower performance. This setting performs best with most gravity, pumped, and mains pressure unvented systems. On electric showers and some combination boiler systems the economy setting will have no effect, and will give the same spray action as the start setting.

If you experience any difficulty with the installation or operation of your new shower fitting, then please refer to **Section - 'Fault Diagnosis'**, before contacting Kohler Mira Limited. Our telephone and fax numbers can be found on the back cover of this guide.

IMPORTANT SAFETY INFORMATION

1. WARNING!

Products manufactured by us are safe and without risk provided they are installed, used and maintained in good working order in accordance with our instructions and recommendations.

2. Caution!

2.1. Read all of these instructions.

2.2. Retain this guide for later use.

2.3. Pass on this guide in the event of change of ownership of the installation site.

2.4. Follow all warnings, cautions and instructions contained in this guide.

2.5. The plumbing installation must comply with the requirements of UK Water Supply Regulations/Bye-laws (Scotland), Building Regulations or any particular regulations and practices, specified by the local water company or water undertakers. The installation should be carried out by a plumber or contractor who is registered, or is a member of, an association such as:

2.5.1. Institute of Plumbing (IOP), throughout the UK, Tel: 01708 472791.

2.5.2. National Association of Plumbing, Heating and Mechanical Services Contractors (NAPH & MSC), England and Wales, Tel: 01203 470626.

2.5.3. Scottish and Northern Ireland Plumbing Employers' Federation (SNIPEF), Scotland and Northern Ireland, Tel: 0131 225 2255.


2.6. Anyone who may have difficulty understanding or operating the controls of any shower should be attended whilst showering. Particular consideration should be given to the young, the elderly, the infirm, or anyone inexperienced in the correct operation of the controls.

2.7. When this product has reached the end of its serviceable life, it should be disposed of in a safe manner, in accordance with current local authority recycling, or waste disposal policy.


PACK CONTENTS

- ☐ Tick the appropriate boxes to familiarize yourself with the part names and to confirm that the parts are included.

Mira Response ev, flex and biv shower fittings

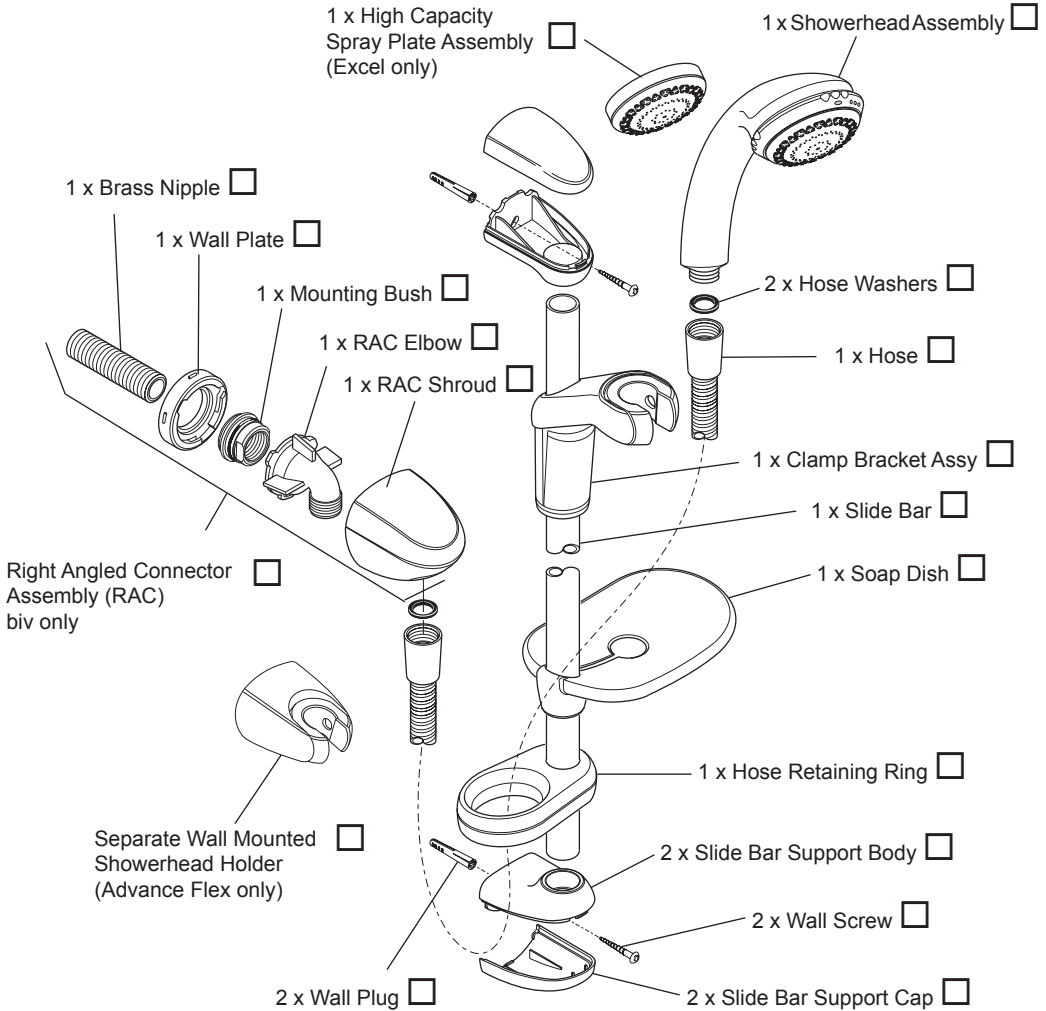

Mira Response bir shower fittings

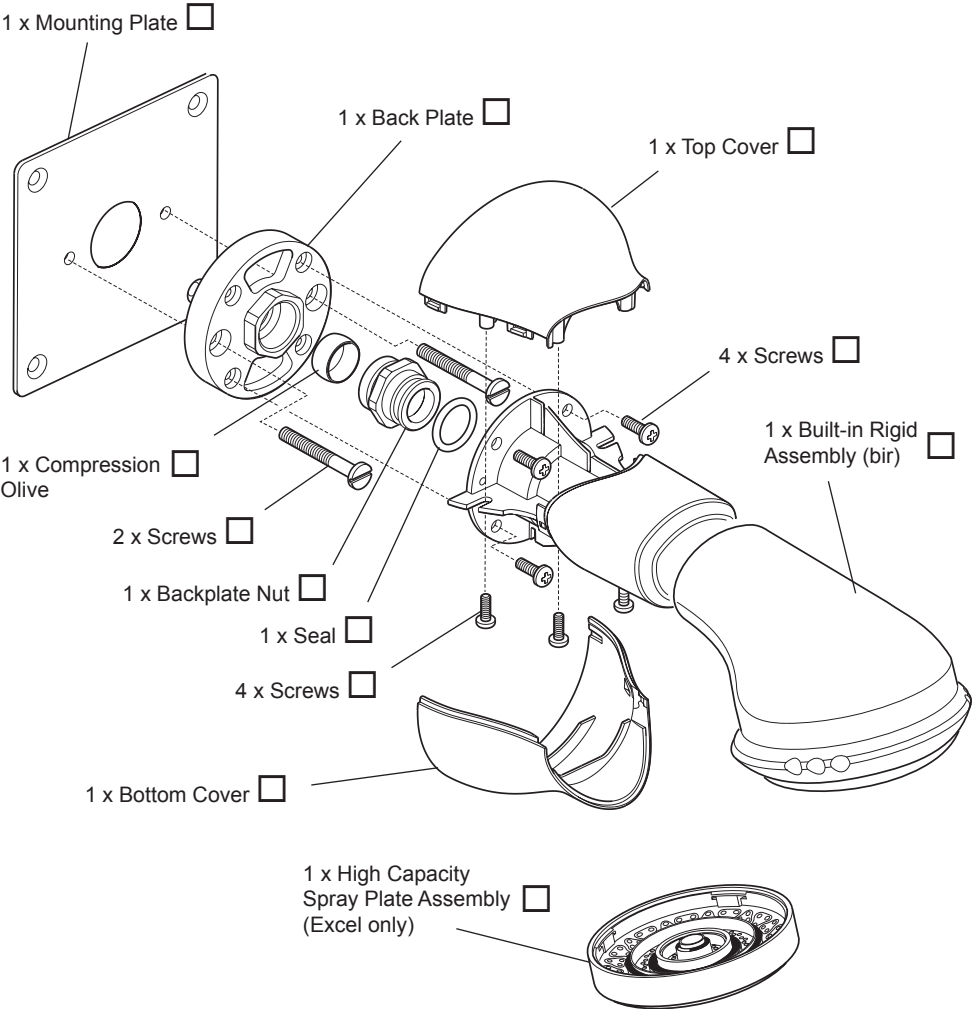


Documentation



- 1 x Installation, Operation and Maintenance Guide ☐
- 1 x Customer Support Brochure ☐

DIMENSIONS

Mira Response ev and biv

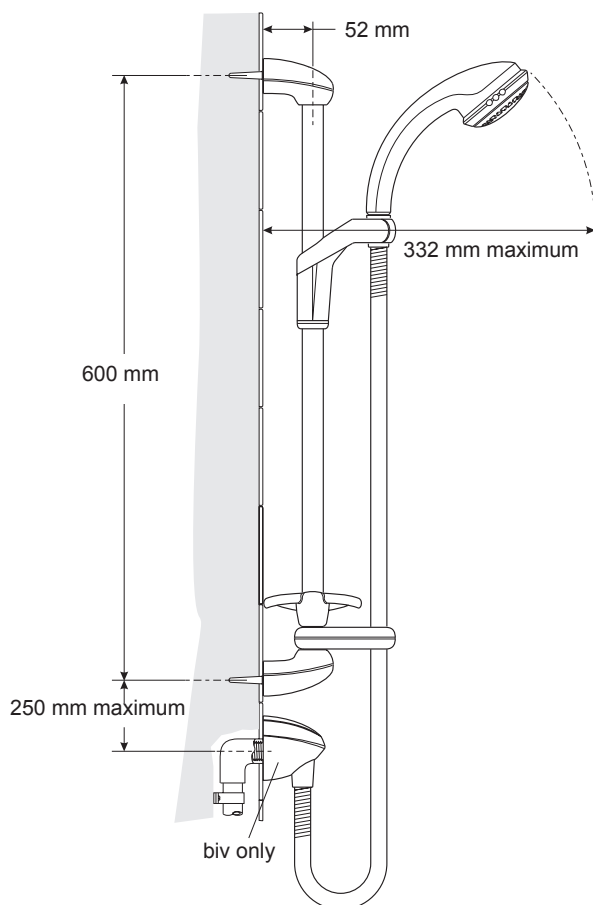

Mira Response bir

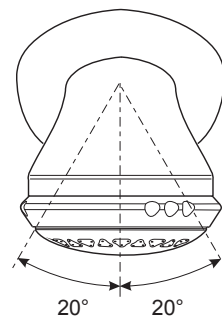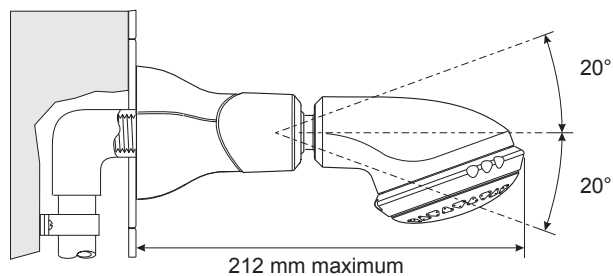

SPECIFICATIONS

Pressures.

For ev and biv fittings

- 1.1. Maximum maintained pressure 5.0 bar. Maintained pressures above this range could result in excessive spray forces and result in possible damage to the product.

For bir fittings

- 1.2. Maximum maintained pressure 3.0 bar. Maintained pressures above this range could result in excessive spray forces and result in possible damage to the product.

Flow Rates.

- 2.1. The typical flow rates for the adjustable range at 0.5 bar pressure loss (low capacity spray plate assembly) are:

Start	=	8.9 litres/minute
Soothe	=	11.5 litres/minute
Force	=	7.5 litres/minute
Economy setting	=	7.7 litres/minute

The low capacity spray plate is recommended for use with shower controls with inlet pressures above 1 bar and electric showers.

- 2.2. The typical flow rates for the adjustable range at 0.5 bar pressure loss (high capacity spray plate assembly) are:

Start	=	14.9 litres/minute
Soothe	=	24.4 litres/minute
Force	=	13.7 litres/minute
Economy setting	=	8.7 litres/minute


The low capacity spray plate is recommended for use with shower controls with inlet pressures below 1 bar.

Flow Performance Graphs


This is the typical pressure loss graph for the Mira Response adjustable range only. There will also be an additional pressure loss through the shower control and outlet hose.

Pressure loss = Pressure difference between the inlet and outlet of the fitting.

Mira adjustable range flow rates - Low capacity spray plate assembly

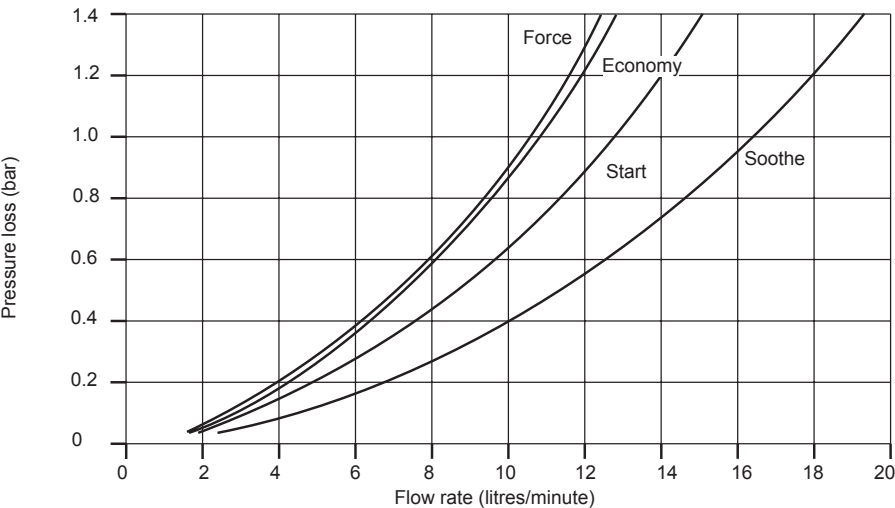

Mira adjustable range flow rates - High capacity spray plate assembly

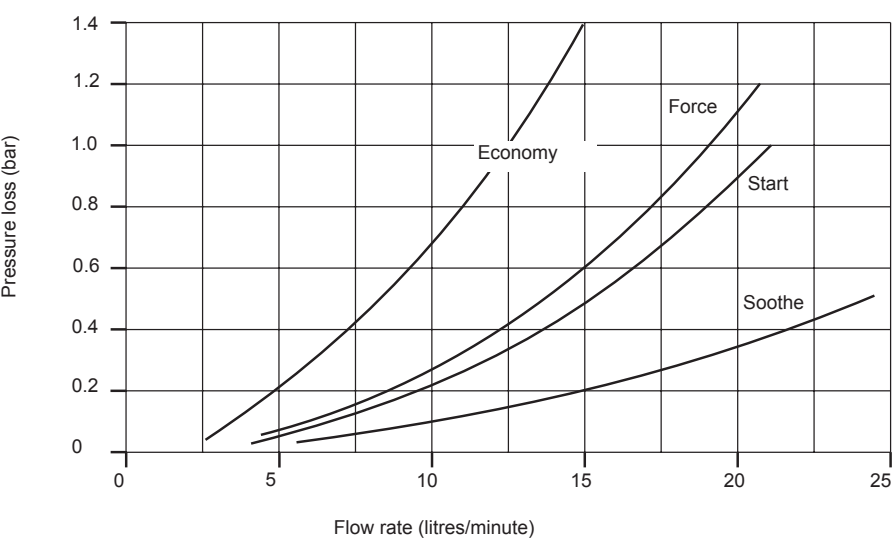

INSTALLATION REQUIREMENTS

Plumbing


Read the **Section - 'Important Safety Information'** first.

- 1.1. Supply pipework **MUST** be flushed to clear debris before connecting the appliance.
- 1.2. A hose retaining ring is supplied to prevent the Showerhead from dropping below the spill-over level of the bath or shower, which could lead to contamination from backsiphonage. The supplied hose retaining ring should meet the great majority of user requirements for shower installations with flexible outlet fittings. However, there will be occasions when the hose retaining ring will not provide a suitable solution. In these instances an **outlet** double checkvalve, e.g. the Mira DCV-H, **must** be fitted. The inclusion of the Mira DCV-H will increase the required supply pressure typically by 0.1 bar.
- 1.3. Avoid layouts where the shower hose will be sharply kinked. This may reduce the life of the hose.
- 1.4. **Do not** fit any form of flow control in the outlet pipework if the shower fitting is installed in conjunction with a product that requires the fitting to act as a vent (e.g. an electric shower).
- 1.5. **Do not** use excessive force when making connections.
- 1.6. **Do not** install the product in a position where it could become frozen.
- 1.7. For a gravity fed shower installation, the minimum pressure at the Showerhead is 0.06 bar. To generate the minimum pressure and accommodate the pressure loss in the pipes and shower control, a head of water of 1.0 metre is required on a typical correct installation.
For a pump installation the minimum acceptable vertical distance between the base of the cold water storage cistern and the shower head to operate the pump's flow switches, is typically 0.6 m (600 mm).
- 1.8. The shower fitting is connected to the bottom outlet of the shower control or right angled connector assembly as appropriate.
- 1.9. When installing the shower fitting into a shower cubicle, it is best positioned to spray across the cubicle rather than towards the opening.
- 1.10. For ev and biv products the maintained water pressure at the Showerhead should not exceed 5.0 bar. Maintained pressures above 5.0 bar at the shower head, could result in excessive spray forces and possible product damage.
- 1.11. For bir products the maintained water pressure at the spray should not exceed 3.0 bar. Maintained pressures above 3.0 bar at the shower head, could result in excessive spray forces and possible product damage.
- 1.12. Layout and sizing of pipework be such that when other services are used, pressures do not fall below the recommended minimum for that fitting as this will cause the spray pattern to collapse.

- 1.13. Perceived sound levels of the Showerhead, pump (if fitted) and spray impingement, will be affected by the spray pattern selected and flow rates.

Spray plate assembly - selection

- 2.1. All shower fittings have the low capacity spray plate assembly installed as standard. The low capacity spray plate assembly is suitable for the pressures generated by a head of water between 0.6 and 5.0 Metres. For the higher pressures generated by a greater head install the high capacity spray plate assembly to allow more flow, refer to **Section - Maintenance: 'Spray plate assembly - removal and installation'**. The high capacity spray plate assembly is supplied in addition to the low capacity spray plate assembly with the Excel only. It is available upon request for other Mira shower controls.
- 2.2. The high capacity spray plate assembly is recommended for gas water heaters that require a higher flow rate to operate correctly.
- 2.3. **Identification** - Both spray plate assemblies have an identification letter in the bottom of the centre recess in the back face. The 'L' signifies a low capacity spray plate assembly and the 'H' signifies the high capacity version.

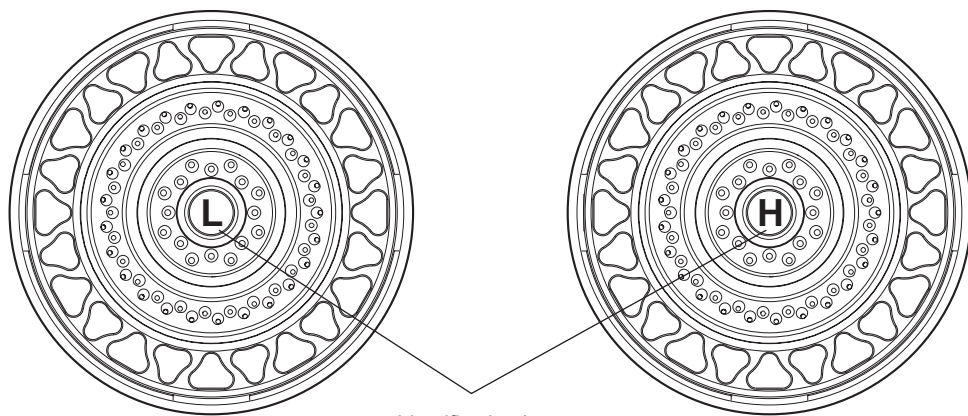

Identification Letter

INSTALLATION



Mira Response ev and Flex - Solid, dry-lined, stud partition, shower cubicle or laminated panel wall installation


Read the **Section - 'Installation Requirements'** first.

The slide bar should be fixed to the wall to one side of the product and at a convenient height for all the family. It should be positioned so that it discharges down the centre line of the bath, or across the opening of a shower cubicle and should be directed away from the shower control.

1. Decide on a suitable location for the slide bar avoiding buried cables and pipes. The position of the shower control and the shower fittings must provide a minimum gap of 25 mm between the spill-over level and the Showerhead. This is to prevent backsiphonage. Alternatively the Mira **outlet** double check valve (DCV-H) can be fitted and is available as an accessory.
2. For solid walls drill two 7 mm diameter holes at 600 mm centres and insert the wall plugs.

Note! Special consideration should be given to the fixing arrangements when installing on to a dry lined, stud partition, shower cubicle or laminated panel wall structures. Installers may wish to obtain alternative proprietary cavity fixing, or choose other options, however, these methods of fixing are beyond the scope of this guide.

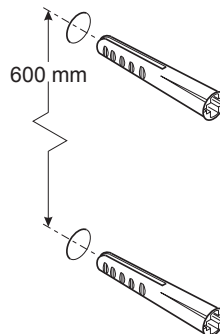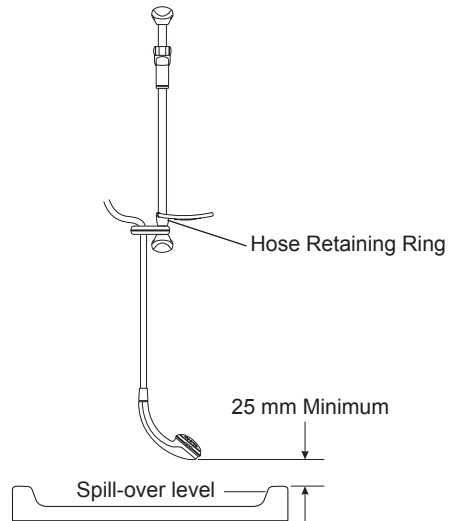


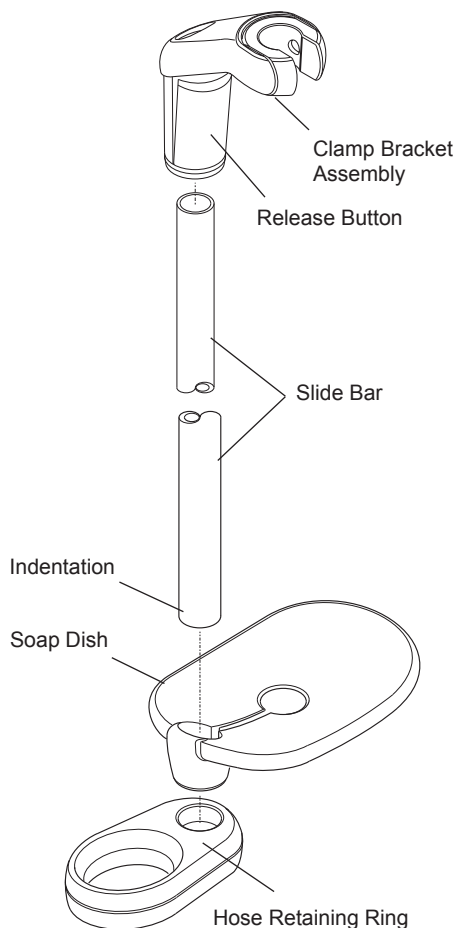

3. Depress the release button on the clamp bracket assembly and slide the clamp bracket assembly on to the slide bar. The slide bar has an indentation at one end that should engage in the lower slide bar support body.


4. Slide the soap dish on to the slide bar.

5. Slide the hose retaining ring on to the slide bar below the soap dish.

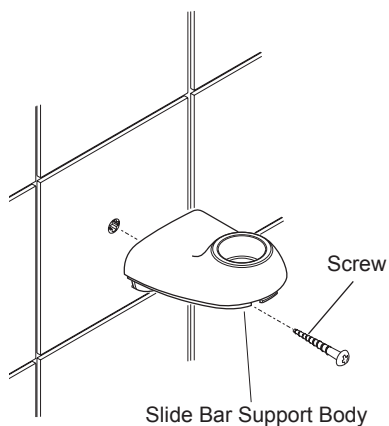


6. Use the screw provided to fix the bottom slide bar support body to the wall. Do not fully tighten the screw to make aligning the top slide bar support body easier.


7. Push the slide bar, complete with the previously assembled components, into the recess in the bottom slide bar support body. Rotate the slide bar until the **indentation** engages in the slide bar support body, to prevent further rotation.

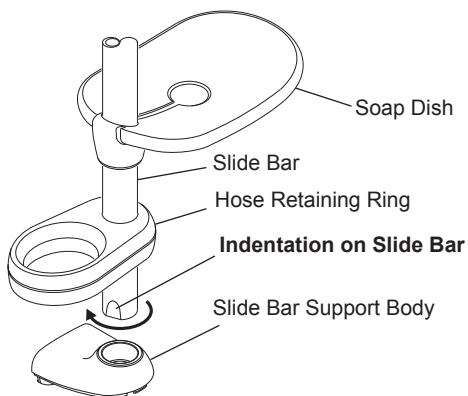

8. Push the top slide bar support body on to the slide bar and fix to the wall with the screw provided.

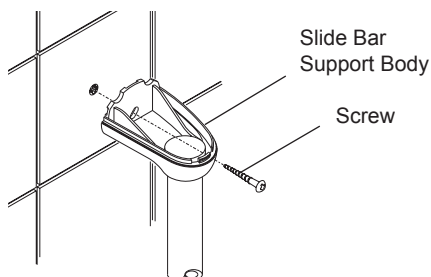



9. Fully tighten both screws.

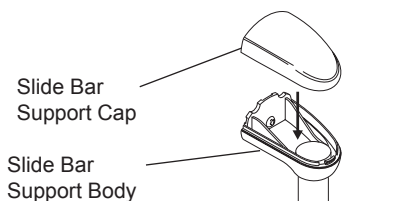

10. Fit the slide bar support caps pushing them vertically onto the slide bar support bodies.

Note! To remove the slide bar support caps insert a suitable flat bladed screwdriver between the joint line at the rear, and carefully twist to remove the slide bar support cap.

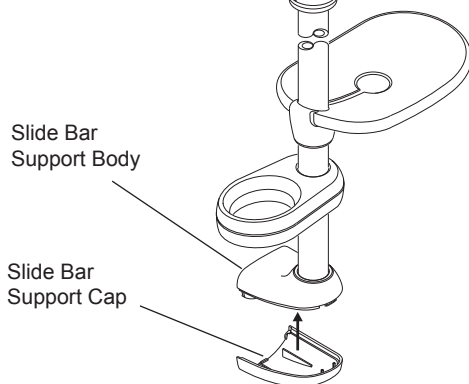


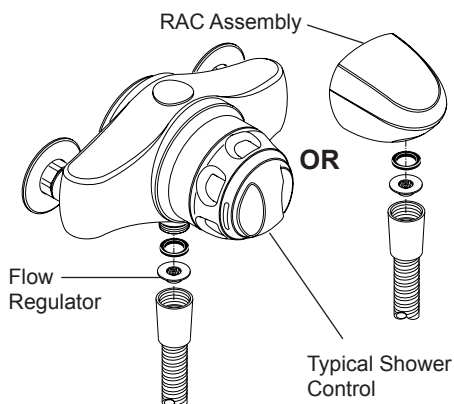

Caution! Do not over tighten the hose.


11. Screw the hose on to the outlet of the shower control. Make sure that the hose washer is fitted.

Note! If necessary a 9 litre/minute flow regulator can be fitted under the hose washer. The flow regulator is available as an accessory.

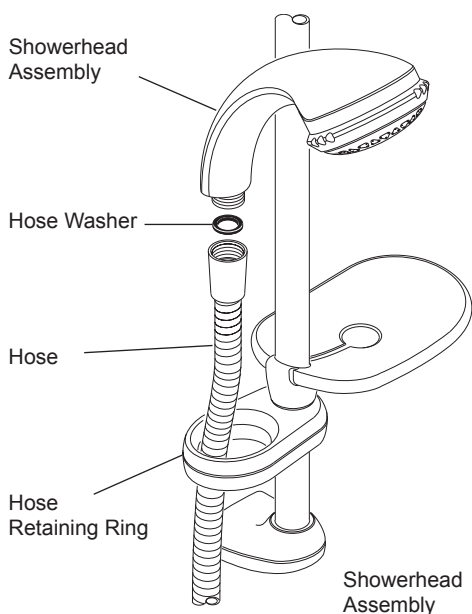

Caution! Do not over tighten the hose.

12. Pass the hose through the hose retaining ring and screw on to the Showerhead assembly. Make sure that the hose washer is fitted.

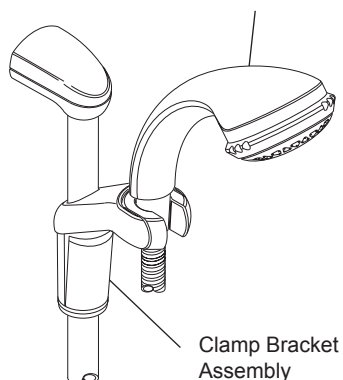


13. Place the Showerhead assembly in the clamp bracket assembly.

Mira Response biv - Solid and dry-lined wall installation


Read the **Section - 'Installation Requirements'** first.

When the shower fitting is connected to the right angled connector assembly (RAC) it should be positioned above and offset to one side of the top outlet of the shower control. The RAC is offset to prevent the flexible hose from obstructing the temperature and flow control knobs of the shower control. The pipework between the shower control and the 1/2" BSP female fitting are not supplied as part of the shower fitting.


1. The supply pipe from the shower control must terminate at the wall surface with a 1/2" BSP female thread. The end of the fitting must be flush with, or up to 5 mm below the finished surface of the wall.

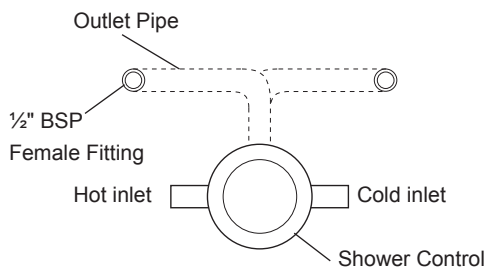


2. Apply liquid sealant or PTFE tape to the 1/2" BSP brass nipple. **Do not use paste.**

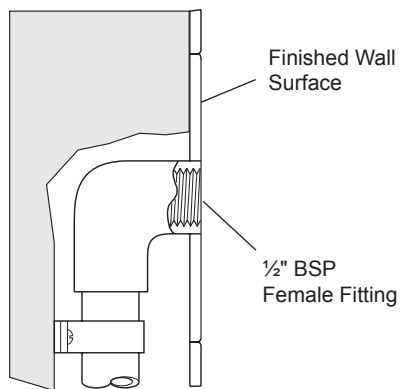


3. Screw the brass nipple into the female fitting, until it projects between 20 and 22 mm from the finished surface of the wall. If the brass nipple projects greater than 22 mm it will prevent the RAC elbow from engaging with the wallplate. If necessary, cut the brass nipple to the correct length and remove any burrs.

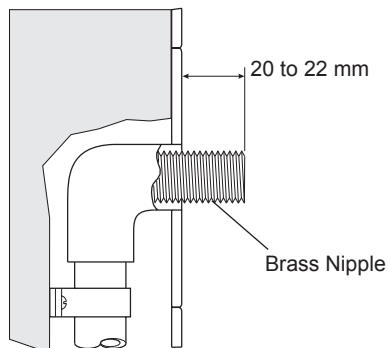

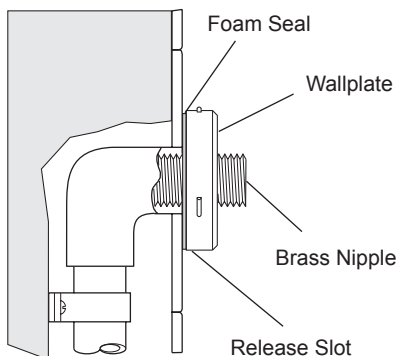


4. Place the wallplate over the brass nipple. Make sure that the foam seal abuts the finished wall surface.

5. Apply liquid sealant or PTFE tape to the exposed section of the brass nipple. **Do not use paste.**

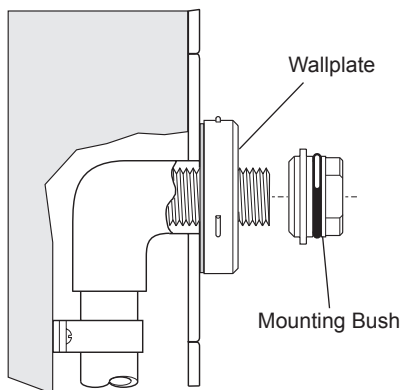


6. Screw the mounting bush on to the brass nipple until it clamps the wallplate loosely against the wall.

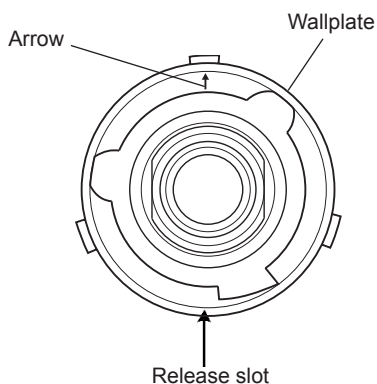

7. Rotate the wallplate to align the elbow release slot at bottom centre, and with the arrow pointing upwards.


8. Tighten the mounting bush to hold the wallplate in position. Flats are provided on the mounting bush for a 24 mm A/F spanner.

9. Push the RAC elbow fully on to the mounting bush and into the recess in the wallplate.

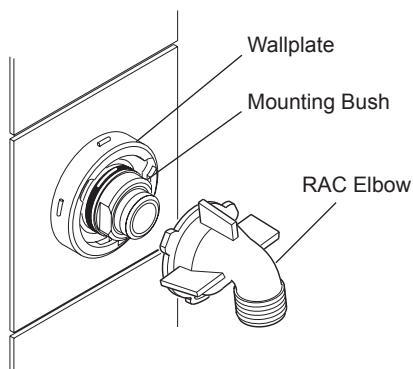


10. Rotate the RAC elbow clockwise to lock it in position. A 'click' will confirm that the RAC elbow is locked.

Note! To unlock the RAC elbow insert a small screwdriver or other suitable tool vertically through the slot in the bottom of the wallplate to depress the locking tab. Rotate the RAC elbow through approximately 5° and remove the screwdriver. The RAC elbow can then be rotated anticlockwise until it can be pulled away from the wall.

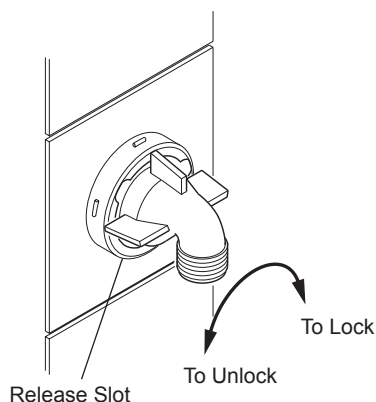

11. Locate the RAC shroud over the RAC elbow. Carefully push the shroud until it engages with the lugs on the wallplate.

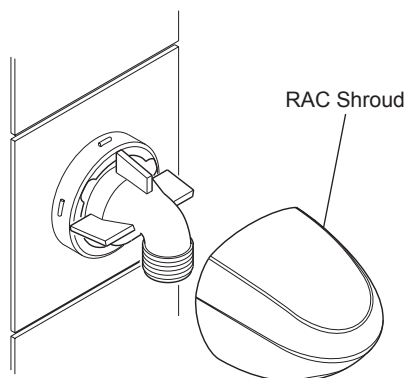


12. To complete the installation of the biv follow instructions 1 to 13 from **Section - 'Mira Response ev and Flex - Solid, dry-lined, stud partition, shower cubicle or laminated panel wall installation'**.

Mira Response biv - Shower cubicle, laminated panel or stud partition wall installation


Read the **Section - 'Installation Requirements'** first.

When the shower fitting is connected to the right angled connector assembly (RAC) it should be positioned above and offset to one side of the top outlet of the shower control. The RAC is offset to prevent the flexible hose from obstructing the temperature and flow control knobs of the shower control. The pipework between the shower control and the 1/2" BSP female fitting is not supplied as part of the shower fitting.

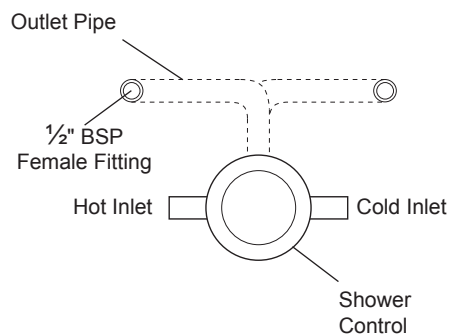

1. The supply pipe from the shower control must terminate with a 1/2" BSP female thread.

2. Apply liquid sealant or PTFE tape to the 1/2" BSP brass nipple. **Do not use paste.**

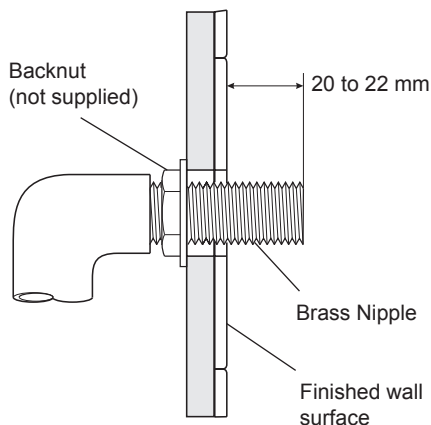

3. Screw the brass nipple into the female fitting behind the panel until it projects between 20 and 22 mm from the finished surface of the wall. A backnut (not supplied) can be used to hold the brass nipple in position. If necessary, cut the brass nipple to the correct length and remove any burrs.

4. To complete the installation of the biv, follow the instructions 4 to 12 from **Section - 'Mira Response biv - Solid and dry-lined wall installation'**.

Mira Response bir - Solid and dry-lined wall installation




Read the **Section - 'Installation Requirements'** first.

The bir spray head should be positioned at a convenient height for all the family. It should be positioned so that it discharges down the centre line of the bath, or across the opening of the shower cubicle and it should be directed away from the shower control. The pipework between the shower control and the backplate nut is not supplied as part of the shower fitting.

1. Fit recessed 15 mm copper pipe from the shower control and ensure the pipe will protrude from the **finished** wall surface by **at least 23 mm**.
2. Loosely screw the backplate to the mounting plate with the two screws provided.
3. Place the mounting plate and backplate over the copper pipe.

Important! Ensure the recessed pipework is vertical.


4. Fit and tighten the backplate nut sufficiently to hold the assembly against the wall.
5. Mark the position of the mounting plate and its fixing holes on the wall surface.
6. Remove the backplate nut, compression olive and the backplate/ mounting plate assembly. Remove the screws and the wallplate from the mounting plate.

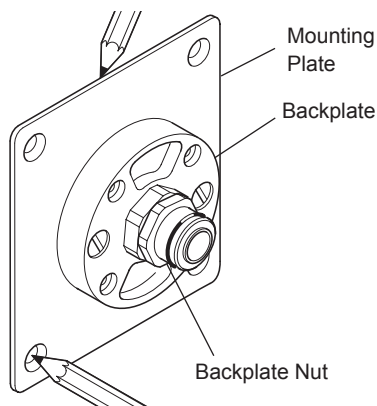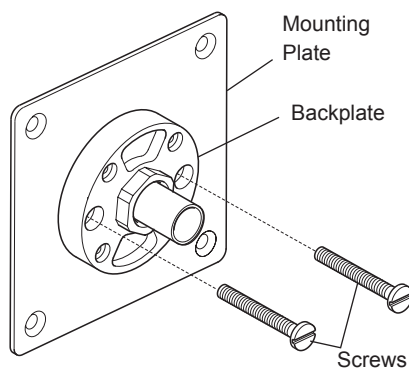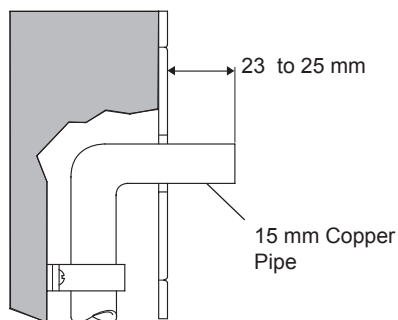

7. Drill the four mounting plate fixing holes. If necessary, make a recess approximately 6 mm deep to accept the mounting plate. Fit the four wall plugs supplied to the fixing holes.


8. Fix the mounting plate to the wall with four screws (not supplied). The two threaded holes must be horizontal.

9. Temporarily fit the two backplate fixing screws into the mounting plate. This will prevent the fixing holes from becoming blocked with plaster or grout.

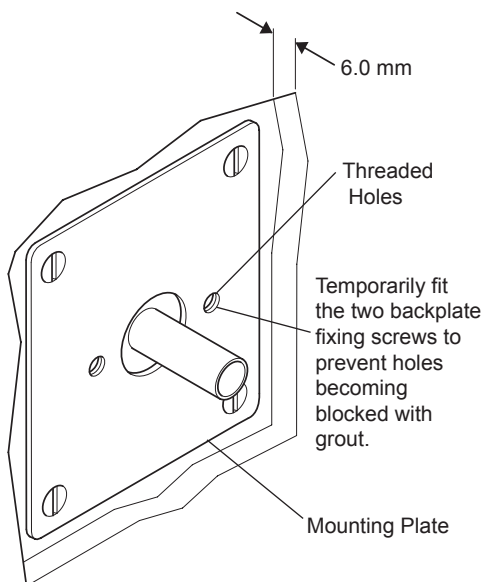


10. Finish the surface of the wall as required.


11. The copper pipe must protrude through the wall between 23 - 25 mm from the finished surface of the wall. If the pipe protrudes further than 25 mm it will prevent the backplate nut from engaging with the backplate. If necessary cut the pipe to the correct length and remove any burrs.

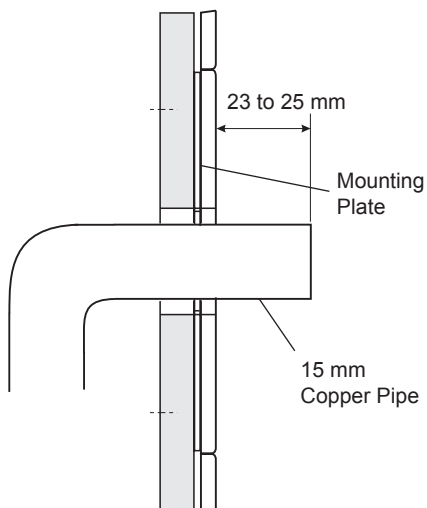


- 12.** Fix the backplate to the wall using the two fixing screws.

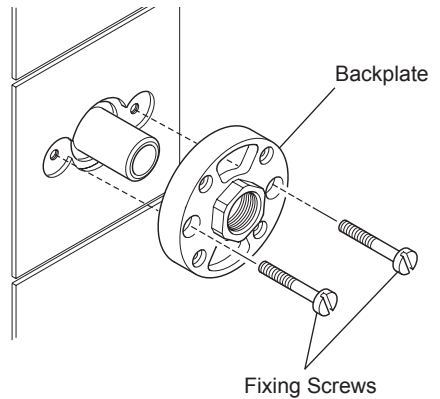

- 13.** Fit the compression olive over the copper pipe and tighten the backplate nut into position. Flats are provided on the wallplate and backplate nut for a 24 mm A/F spanner.

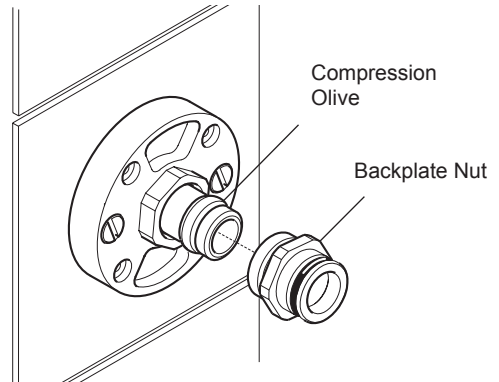


- 14.** Ensure the 'O' seal is fitted on the backplate nut. Push the bir assembly over the backplate nut onto the wallplate.

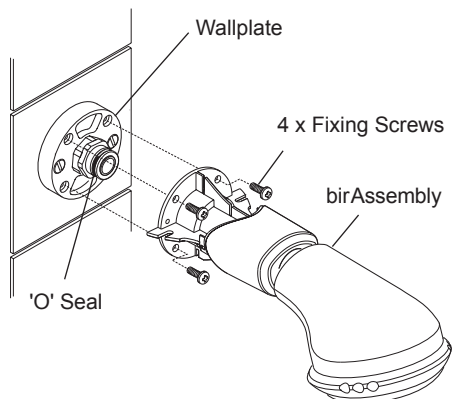


- 15.** Fix the bir assembly to the wall plate using the four screws provided.

16. Fix the upper shroud to the bir assembly using the four self-tapping screws provided.

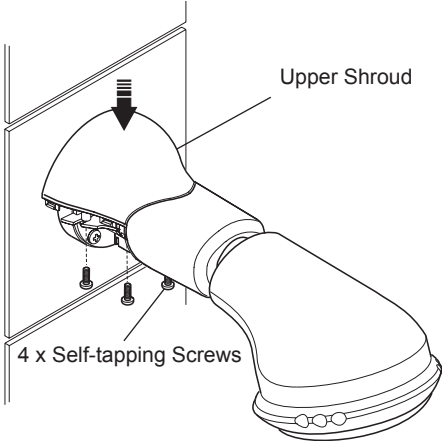

17. Snap the lower shroud into position.

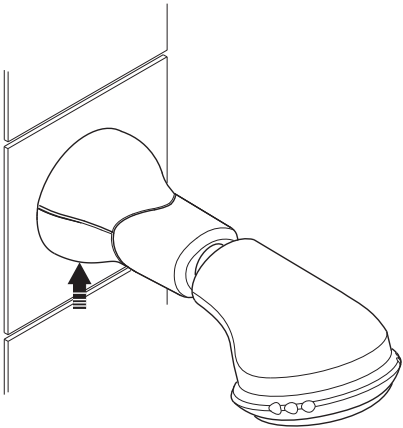

Mira Response bir - Shower cubicle, laminated panel or stud partition walls installation

Read the **Section - 'Installation Requirements'** first.

The bir spray head should be positioned at a convenient height for all the family. It should be positioned so that it discharges down the centre line of the bath, or across the opening of the shower cubicle and it should be directed away from the shower control. The pipework between the shower control and the backplate nut is not supplied as part of the shower fitting.




1. Cut a 25 mm hole in the panel and two 5.5 mm holes at 48 mm centres.

2. Feed the copper pipe through the mounting plate and panel. Ensure the pipe protrudes **at least 23 mm** from wall.

3. The copper pipe must protrude through the wall between 23 - 25 mm from the finished surface of the wall. If the pipe protrudes further than 25 mm it will prevent the backplate nut from engaging with the backplate. If necessary cut the pipe to the correct length and remove any burrs.

4. Hold the mounting plate in position behind the panel, place the backplate in front of the panel and insert the two backplate screws through the holes in the panel and fit them into the mounting plate and tighten.

5. To complete the installation of the bir fittings follow instructions 13 to 17 from **Section - 'Mira Response bir - Solid and dry-lined wall installation'**.

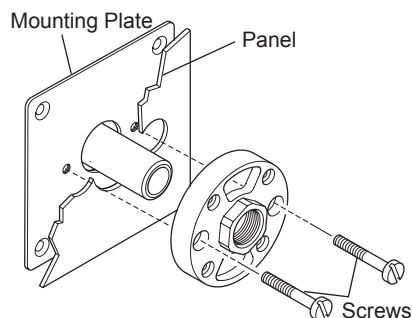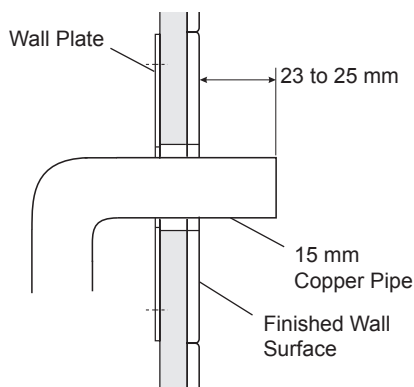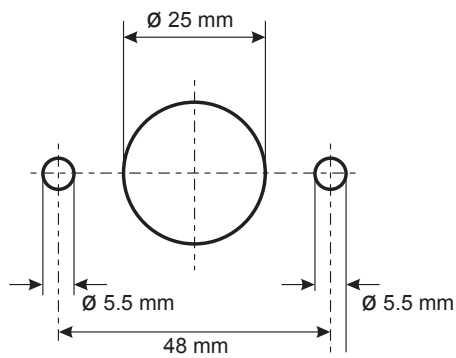


OPERATION

Spray action

The Mira Response adjustable Showerhead or spray head has three different spray actions (start, soothe and force) and an economy setting. The operation of the adjustable Showerhead and the bir assembly is identical. The Showerhead operation is described.


Start

Turn the adjuster ring until the three dots align with top centre of the Showerhead. Water will flow from the outer set of holes.

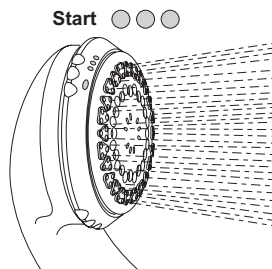


Soothe

Turn the adjuster ring until the two dots align with top centre of the Showerhead. Water will flow from the large diameter holes.

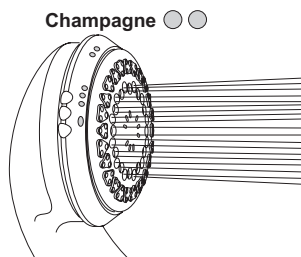

Force


Turn the adjuster ring fully anticlockwise. The single dot will align with top centre of the Showerhead. Water will flow from the inner set of holes.

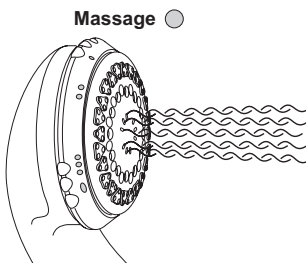


Economy setting

Turn the adjuster ring fully clockwise. The oval symbol will align with top centre of the Showerhead. Water will flow from the outer set of holes and the flow rate will be reduced. For further information on the economy setting refer to **Section - 'Introduction'**.

Economy Setting

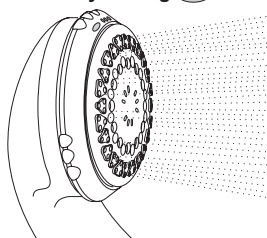


Height and direction adjustment

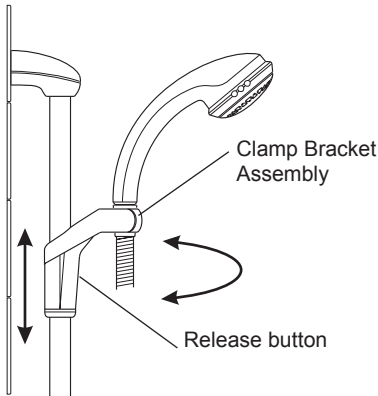


Mira Response ev and biv

1. Depress the release button and slide the clamp bracket assembly to the required position.

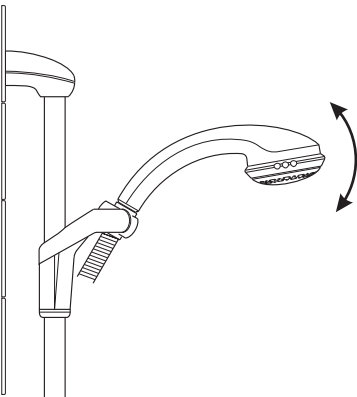


2. Move the Showerhead to the required angle. A ratchet mechanism in the clamp bracket assembly holds the Showerhead in the selected position. There are four positions.

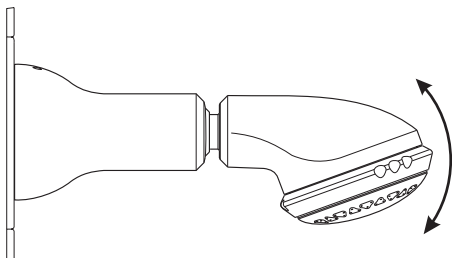

Mira Response bir

3. Move the spray head to the required position. The spray head is adjustable in both the horizontal and vertical directions, and can also be rotated.

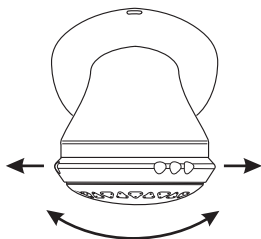


MAINTENANCE

Cleaning

Many household cleaners contain abrasives and chemical substances, and should not be used for cleaning plated or plastic fittings. These finishes should be cleaned with a mild washing up detergent or soap solution, and then wiped dry using a soft cloth.



Spray plate assembly - external

1. Use your thumb or a soft cloth to wipe any limescale from the soft triangular nozzles and the front face of the spray plate assembly.

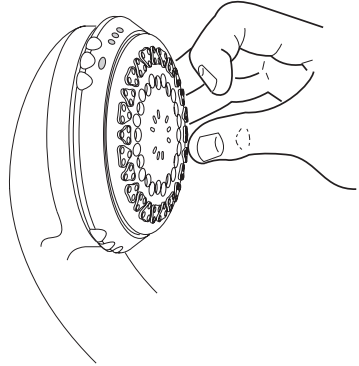


Spray plate assembly - internal

2. Remove the spray plate assembly. Refer to **Section - 'Maintenance - Spray plate assembly - removal and installation'**.
3. Remove the 'O' seals.
4. Clean all the components with a stiff brush. If necessary use a plastic kettle descaler in accordance with the manufacturer's instructions.
5. Refit the components in reverse order.
6. Install the spray plate assembly. Refer to **Section - 'Maintenance - Spray plate assembly - removal and installation'**.

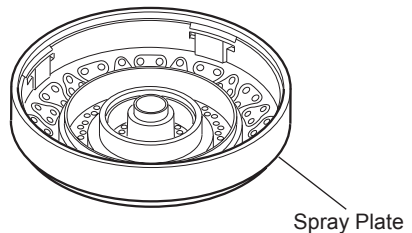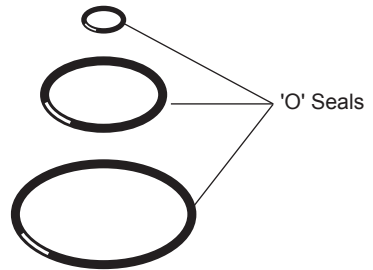


Spray plate assembly - removal and installation

The procedure for the removal and installation of the spray plate assembly is identical for both the Showerhead and the bir assembly. The Showerhead procedure is described.

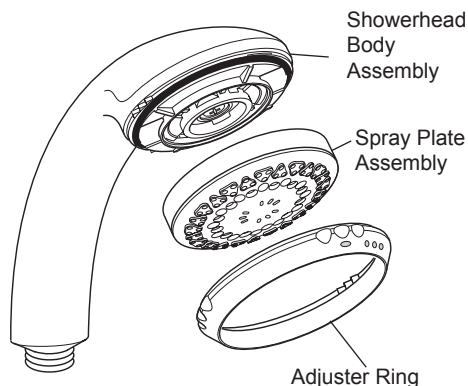

Removal

1. Turn the adjuster ring fully anticlockwise.
2. Unclip and remove the adjuster ring.
3. Unscrew the spray plate in an anti-clockwise direction. The 'O' seals will provide some resistance.

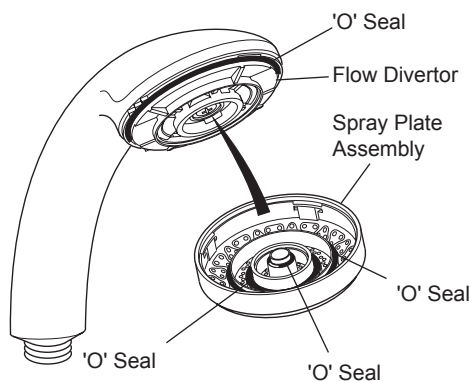


Installation

1. Make sure that the four 'O' seals are located correctly.
2. Turn the flow diverter fully clockwise.

Caution! Do not over tighten the spray plate.

3. Carefully screw the spray plate assembly on to the flow diverter. The 'O' seals will resist the rotation of the spray plate. There should be a gap between the edge of the spray plate assembly and the flow diverter.

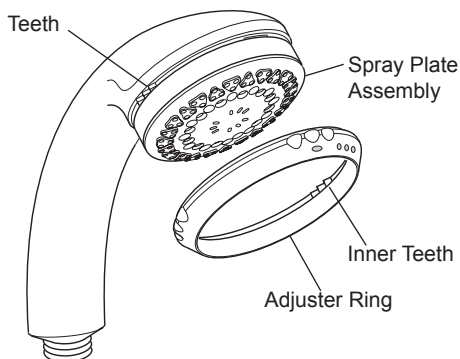

4. Make sure that the green bar on the adjuster ring is uppermost and align the inner teeth on the adjuster ring with the teeth on the Showerhead flow diverter. Clip the adjuster ring into position.

FAULT DIAGNOSIS

Read the **Section - 'Important Safety Information'** first.

Providing the shower fitting has been correctly installed and is operated in accordance with the instructions contained in this guide, difficulties should not arise. If any maintenance is required then it must be carried out by a competent tradesperson for whom the fault diagnosis chart and maintenance instructions are provided. Before replacing any parts ensure that the underlying cause of the malfunction has been resolved.

Malfunction	Cause	Remedy
No flow or low flow rate.	<p>Spray plate assembly blocked.</p> <p>Hose blocked or twisted.</p> <p>Partially closed stop or servicing valve in supply pipe work to shower control.</p> <p>Head of water below minimum required.</p>	<p>Refer to Section - 'Maintenance - Cleaning'.</p> <p>Clear blockage or release twist in hose.</p> <p>Open valve.</p> <p>Raise cistern or fit Mira pump.</p>
Drip from spray plate assembly in Showerhead or bir assembly.	<p>A small amount of water may be retained in the Showerhead after the shower control has been turned off. This may drain over a few minutes.</p> <p>Defective seal(s) in the shower control.</p>	<p>This is quite normal. Changing the angle of the shower fitting may vary the draining time.</p> <p>Refer to shower control Installation, Operation and Maintenance Guide.</p>
Shower temperature changes when spray action is adjusted.	<p>Spray plate assembly blocked.</p> <p>Adjusting the spray action changes the flow of water. This may affect some shower controls and plumbing installations.</p>	<p>Make sure that the spray plate assembly is clean. Refer to Section - 'Maintenance - Cleaning'.</p> <p>Install the high capacity spray plate assembly, Refer to Section - 'Maintenance - Spray plate assembly - removal and installation'.</p> <p>If the malfunction persists refer to the shower control Installation, Operation and Maintenance Guide for details on the shower control or plumbing installation.</p>


Malfunction	Cause	Remedy
Flow rate too high. (ev and biv only)	Shower control does not have a separate flow control.	Fit an optional 9 litres/minute flow regulator. The use of the regulator will reduce the force and flow rate of the shower.
Flow rate too high. (bir only)		Fit an optional flow regulator to the hot water inlet of the shower control . The use of the regulator will reduce the force and flow rate of the shower. Refer to the shower control Installation, Operation and Maintenance Guide for correct installation of flow regulator.

SPARE PARTS

Mira Response ev and biv spare parts list

150.57	Hose - white
150.58	Hose - chrome
150.60	Hose - chrome (1.5 Metre length for bath/shower mixers)
150.67	Hose - light golden
150.69	Hose - light golden (1.5 Metre length for bath/shower mixers)
411.05	Adjuster Ring
411.22	RAC Mounting Pack
411.23	Clamp Bracket Assembly
411.30	Slide Bar Support Assembly
411.37	Service Pack 'O' Seals - components identified 'A'
411.46	RAC Shroud - white
411.53	Slide Bar - stainless steel
411.54	Slide Bar - white
411.55	Slide Bar - light golden
411.58	Hose Retaining Ring
411.66	Brass Nipple
411.90	RAC Shroud - light golden
411.91	Soap Dish Pack
411.92	Adjustable Showerhead
411.94	Screw Pack
411.95	Spray Plate Assembly - High capacity (not illustrated)
411.96	Spray Plate Assembly - Low capacity
413.22	Adjuster Ring - satin chrome
413.24	Clamp Bracket Assembly - chrome
413.30	Slide Bar Support Assembly - chrome
413.33	Hose Retaining Ring - chrome
413.34	Soap Dish Pack - chrome
413.57	RAC Shroud - chrome
413.58	Showerhead Body Assembly - chrome
413.60	Spray Plate Assembly - High capacity (not illustrated) - dark grey
413.61	Spray Plate Assembly - Low capacity - dark grey
413.63	Slide Bar - chrome
632.73	Hose Washer


Mira Response ev and biv spare parts diagram

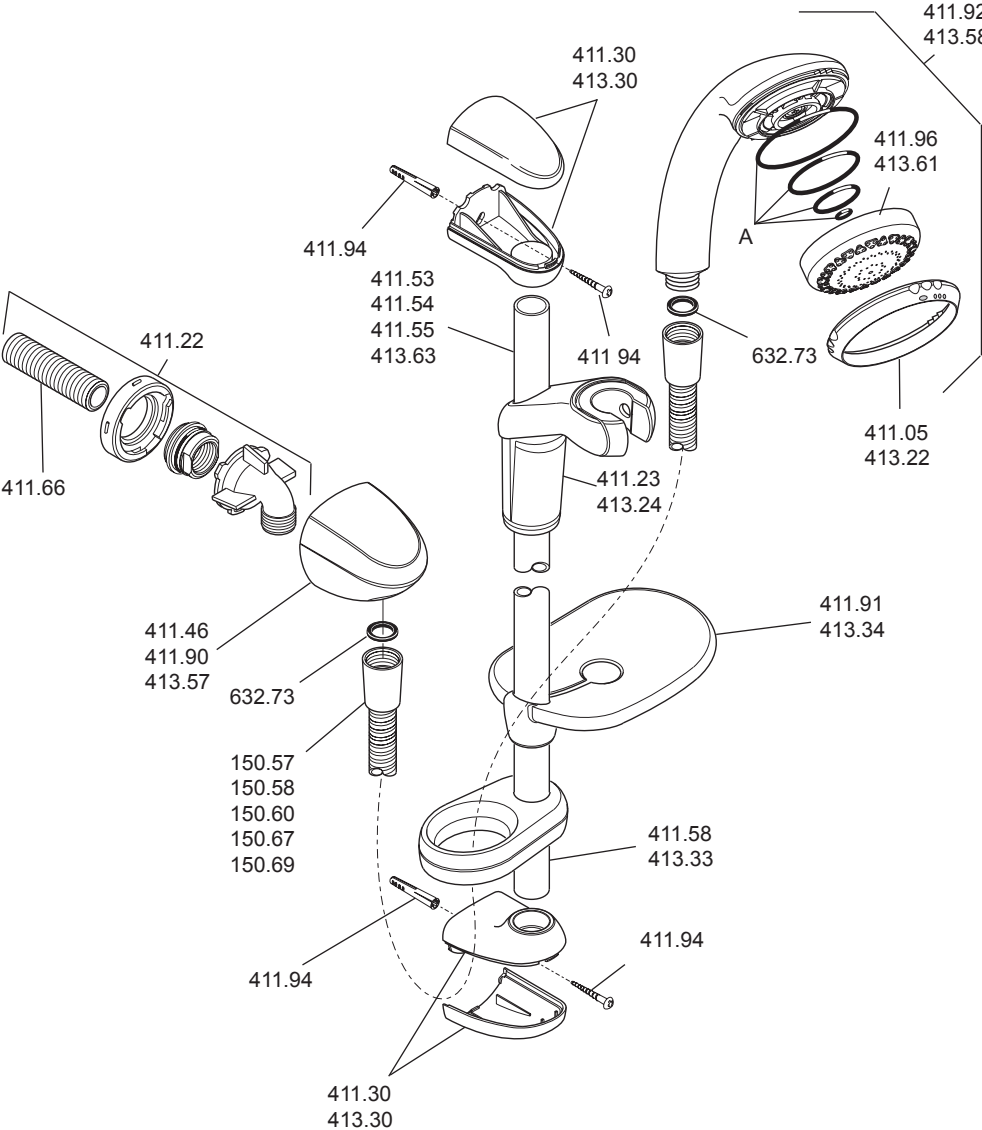

Mira Response bir spare parts list


411.05	Adjuster Ring
411.37	Service Pack 'O' Seals - components identified 'A'
411.95	Spray Plate Assembly - High capacity
411.96	Spray Plate Assembly - Low capacity
413.22	Adjuster Ring - satin chrome
413.60	Spray Plate Assembly - High capacity - dark grey
413.61	Spray Plate Assembly - Low capacity - dark grey
450.43	bir Mounting Pack (Consisting of Back Plate Nut, 'O' Seal, Olive, Back Plate, Wallplate, 2 off M5 x 40 Screws and 4 off M4 x 12 Screws)
450.51	bir Assembly - low capacity - white
450.52	bir Assembly - chrome

Mira Response bir spare parts diagram

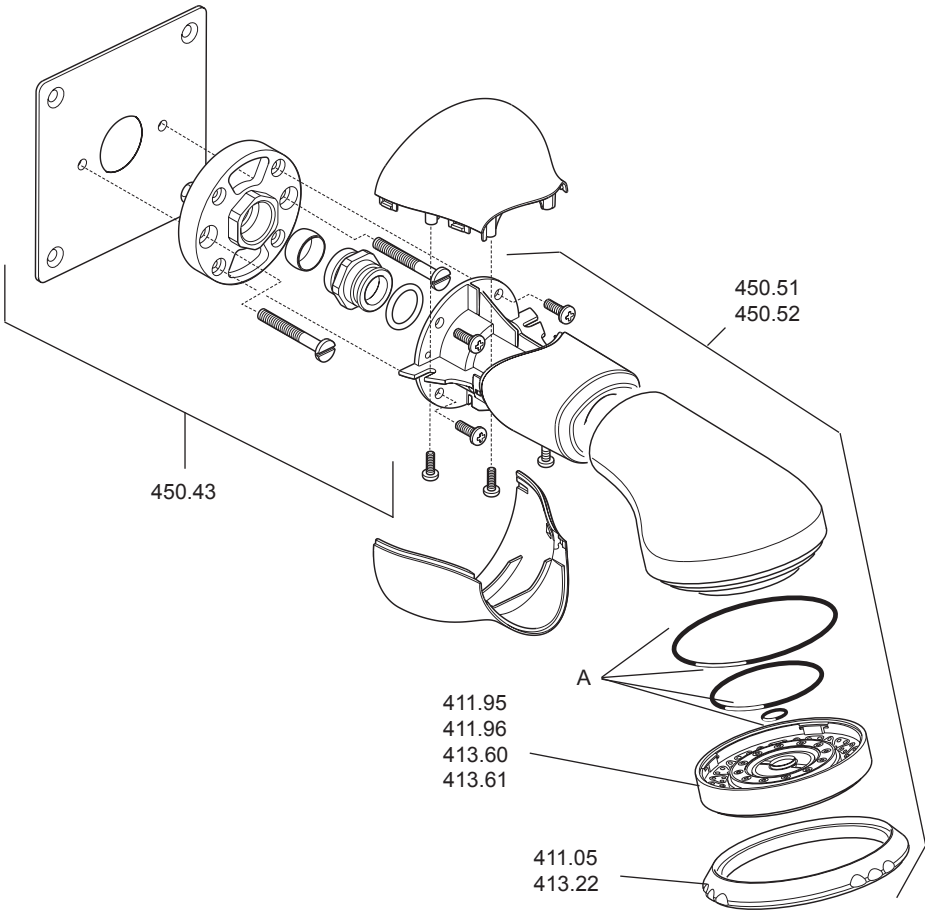

ACCESSORIES

Genuine Mira accessories can be purchased direct from Customers Services (our contact details can be found on the back cover of this guide) or from approved stockists or merchants.

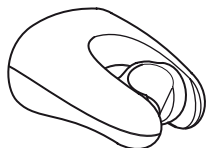


Showerhead Holder

White - 2.1605.149

Chrome - 2.1605.150

If you're looking for additional flexibility in your shower, the Mira Logic Showerhead Holder is the perfect solution. Makes showering easier for children, provides a useful additional holder for your Showerhead which fixes to the wall at the desired height.

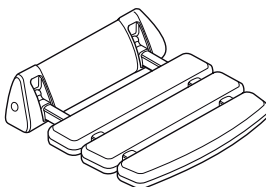


Shower Seat

White - 2.1536.128

White/Chrome - 2.1536.129

For use in or out of the showering area. **Note!** Must be installed onto a solid wall. Shower seat folds up when not in use

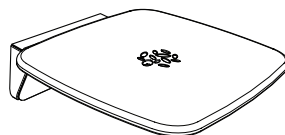


Premium Shower Seat

White/Chrome - 2.1731.001

Grey/Chrome - 2.1731.002

Stylish, slim-line and robust shower seat for use in or outside of the shower area. Folds up when not in use. Maximum User Weight - 150 kg (23.5 stone) **Note!** Must be installed onto a solid wall.

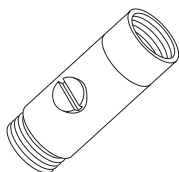

Double Outlet Check Valve (DCV-H)

Chrome - 1.0.110.55.1

DCV-H: An outlet double check valve, designed to prevent the backflow or backsiphonage of potentially contaminated water, through shower controls which are fitted with a flexible hose as part of the outlet shower fitting.

NOTES

CUSTOMER SERVICES

Guarantee

Your product has the benefit of our manufacturer's guarantee which starts from the date of purchase.

To activate this guarantee, please return your completed registration card, visit our website or free phone 0800 0731248 within 30 days of purchase (UK only).

Within the guarantee period we will resolve defects in materials or workmanship, free of charge, by repairing or replacing parts or product as we may choose.

If you have not previously activated the guarantee, you will be required to do so prior to the provision of assistance. If you do not activate your guarantee our Engineer will be entitled to charge full payment for the visit (Call out fee plus parts).

This guarantee is in addition to your statutory rights and is subject to the following conditions:

- The product must be installed and maintained in accordance with the instructions given in this user guide.
- Servicing must only be undertaken by us or our appointed representative. **Note!** if a service visit is required the product must be fully installed and connected to services.
- Repair under this guarantee does not extend the original expiry date. The guarantee on any replacement parts or product ends at the original expiry date.
- For shower fittings or consumable items we reserve the right to supply replacement parts only.

The guarantee does not cover:

- Call out charges for non product faults (such as damage or performance issues arising from incorrect installation, improper use, lack of maintenance, build up of limescale, frost damage, corrosion, system debris or blocked filters) or where no fault has been found with the product.
- Water or electrical supply, waste and isolation issues.
- Compensation for loss of use of the product or consequential loss of any kind.
- Damage or defects caused if the product is repaired or modified by persons not authorised by us or our appointed representative.
- Routine maintenance or replacement parts to comply with the requirements of the TMV 2 or TMV 3 healthcare schemes.

What to do if something goes wrong

If your product does not function correctly when you first use it, contact your installer to check that it is installed and commissioned in accordance with the instructions in this manual. Should this not resolve the issue, contact our Customer Services Team who will offer you or your installer advice and if applicable arrange for a Service Technician to call. If the performance of your product declines, check in this manual to see if simple home maintenance is required. If you require further assistance call our Customer Services Team.

Extended Guarantees

A selection of protection plans are available that enable you to cover repair bills for the life of your policy (excludes Eire). Ring 01922 471763 for more details.

Helpdesk Service

Our dedicated Customer Services Team is comprehensively trained and can offer help and advice, spare parts, accessories or a service visit. We will need you to have your model name or number, power rating (if applicable) and date of purchase. As part of our quality and training programme calls may be recorded or monitored.

Mira Showers Website (www.mirashowers.co.uk)

From our website you can register your guarantee, download additional user guides, diagnose faults, purchase our full range of accessories and popular spares, refer to our FAQ's and request a service visit.

Spares and Accessories

We maintain extensive stocks of genuine spares and accessories and aim to provide support throughout the product's expected life. Payment can be made by phone at time of order using most major Credit or Debit cards and we aim to despatch orders within two working days. Items purchased from us are guaranteed for 12 months from date of purchase. For safety reasons spares exposed to mains voltages should only be fitted by competent persons.

Returns – items can be returned within one month of date of purchase, providing that they are in good condition and the packaging is unopened. Please obtain authorisation from our Customer Services Team before return. We reserve the right to apply a 15% restocking charge.

Service / Repairs

We have a nationwide team of Service Technicians who can carry out all service or repair work to your product within the guarantee period and beyond. You have the assurance of a fully trained Mira Technician, genuine Mira spare parts and a 12 month guarantee on any chargeable work done.

Payment should be made directly to the Service Technician who will accept most major Credit or Debit cards.

To Contact Us

UK

Telephone: 0844 571 5000

www.mirashowers.co.uk

E-mail: technical@mirashowers.com

Fax: 01242 282595

By Post: Mira Customer Services Dept, Cromwell Road, Cheltenham, Gloucestershire, GL52 5EP

Eire

Telephone: 01 459 1344

E-mail: sales@modernplant.ie

Fax: Dublin 01 459 2329

By Post: Modern Plant Ltd (Dublin), Otter House, Naas Road, Clondalkin, Dublin 22

Mira is a registered trade mark of
Kohler Mira Limited.

The company reserves the right to alter
product specifications without notice.



mira
SHOWERS